

#### \* PLEASE NOTE

To store ECODRY <sup>™</sup> CLOTHESLINE, lift tabs & collapse inner leg, followed by outer leg ( Reverse of setup )




Hold vertically and extend outer leg



Tip horizontally onto extended leg



Extend inner leg to touch the floor

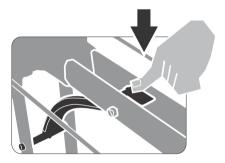


Lock legs in place by depressing tab ( do this on both sides )


## Adjust height to suit your needs



Turn ratchet clockwise to release lock

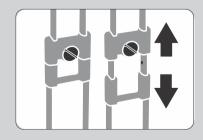

Extend legs up or down to preferred height

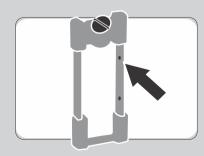


Choose from 4 height levels (listen for click)



Release ratchet to lock legs into place



#### How to tension line

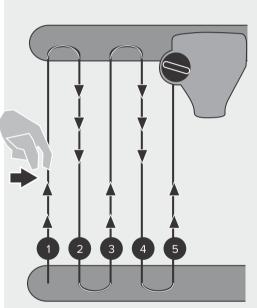


#### To tension clothes line:

Step 1) Gently pull line 1 towards the direction of the arrows as per diagram.

Step 2) Move to line 2, gently pull until slack is transferred from line 1 to line 2.


Step 3) Repeat this for lines 3 & 4 until all slack is transferred to line 5.

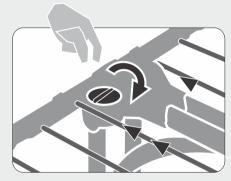

Step 4) Turn ratchet clockwise to remove slack from line 5 (DO NOT over tighten).

# WARNING: DO NOT tension unless line is slack.

### Easy to move

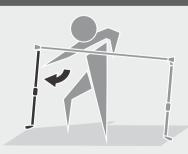

To move, lift one side (approx. knee height) & drag.

#### **Hidden Castors**



Hidden castors on both sides will glide over most smooth surfaces.

### **Anchor strap supplied**



On windy days secure the line by looping the strap through orange block in centre of frame. Anchor the other side of the strap to ground using a tent peg, sandbag or weights.

#### **Features**

Unique line tension system - helps to keep the lines tight.

Multiple height adjustments - great for keeping sheets off the ground.

Rust and UV resistant stainless steel fittings are ideal for all weather conditions.

Light & durable aluminum frame easy to fold and store.

Hidden castors - glide easily over smooth surfaces.

#### **DISTRIBUTED BY**



PO BOX 142
Edwardstown 5039
www.ecodryclotheslines.com.au